


If input wires are long, it is recommended to use lossy input capacitors like small electrolytics near the inputs, or soldered at the module inputs.

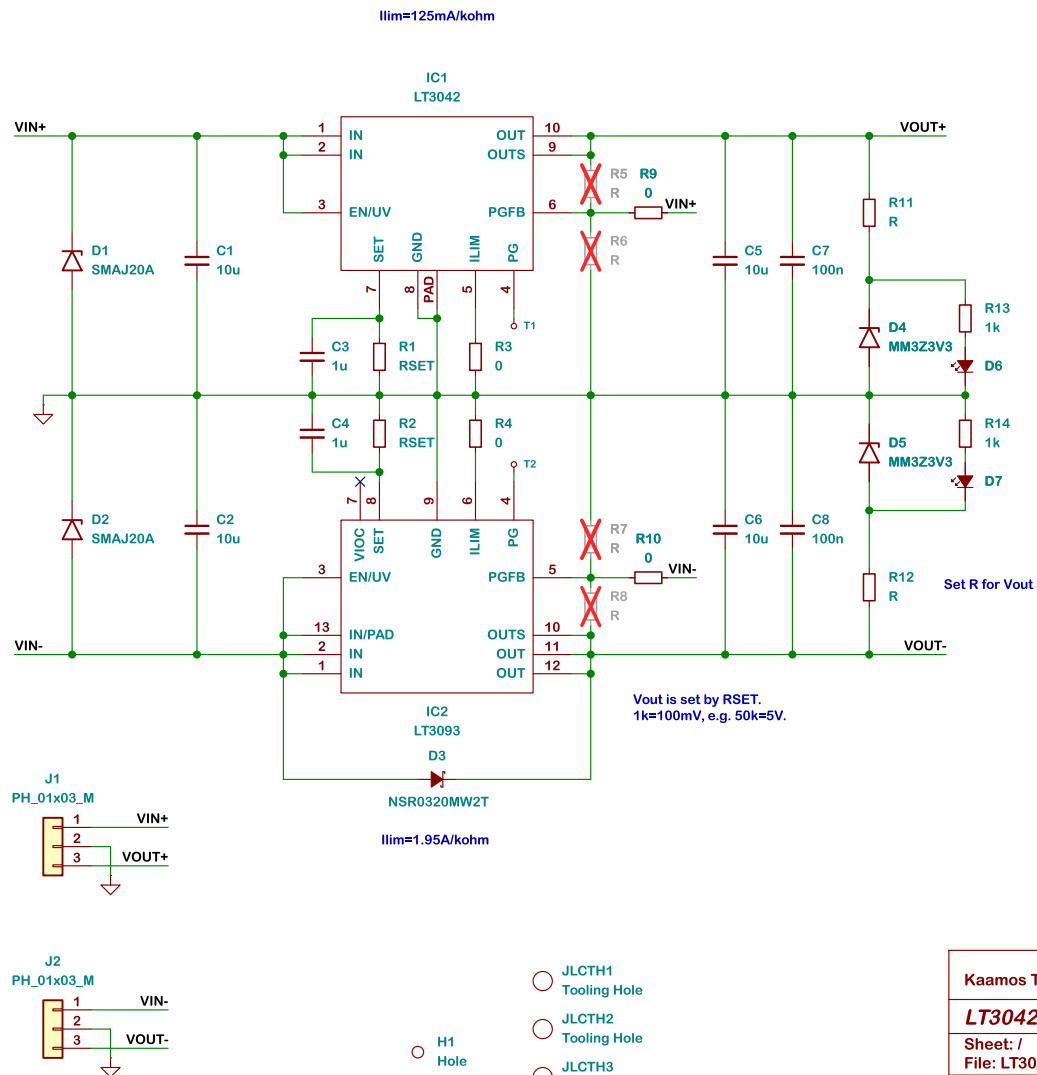

Kaamos Tech Ltd / Tomi Nihtila

LT3042-93 Module

Sheet: /
File: LT3042-93_mod.kicad_sch

Size: A4	Date: 2025-10-29	Rev: v1.1
KiCad E.D.A. 9.0.2	Id: 1/1	